

IMPORTANT NOTICE

DO NOT OPERATE THIS POWER SUPPLY
WITHOUT PROPER CALIBRATION

CALIBRATION TIPS:

- The CLEAN BAR light is preset at the factory. If you want to change the setting, it is recommended that you calibrate the TrueAC first before recalibrating the CLEAN BAR setting. Calibration instructions are on page 11 of the instruction manual.
- The BAR MONITOR SET UP “pot” is the only adjustment necessary to calibrate the TrueAC.
 - Mount the static bar and connect to power supply before beginning calibration. The web should be stopped while calibrating, so that no charge is present.
 - If the SERVICE light is on when you begin, turn the “pot” clockwise until the SERVICE light goes out and continue turning 1/8 to 1/4 turn to complete calibration.
 - If the SERVICE light is not on, and the BAR PERFORMANCE light bar is illuminated high on the scale or the CLEAN BAR light is on, turn the “pot” counterclockwise until the SERVICE light comes on. Then turn the “pot” clockwise until the SERVICE light goes out and continue turning 1/8 to 1/4 turn to complete calibration.