

Cleaning-manual *BaleTainer*[®]

(Stand: 2012-02-15)



Contents

Wrapper	1
Contents	2
Material/Tools	3-4
Optional cleaning tools	3
Hoe/Scratch	3
Broom	3
Scoops	3
Grappler	4
Sticks	4
Notes	4
Waste/Leavings	4
Protective clothing	4
Cleaning	5-7
exterior cleaning	5-7

Material/Tools

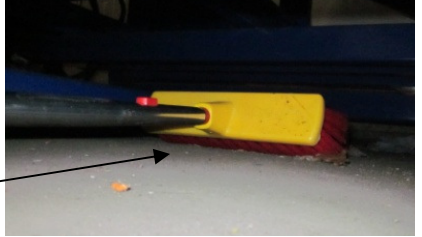
 
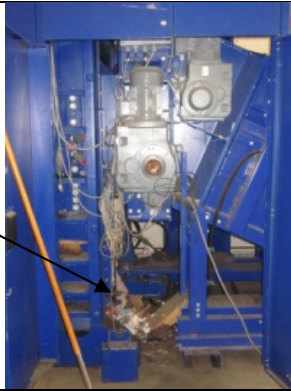
<u>Group: Optional Cleaning-tools</u>	
<u>Hoe/Scratch</u> (Can be ordered also from us)	
Hoe - 10 cm blade width - To remove stubborn dirt	 <i>(Product may differ from illustration)</i>
Scraper - To remove stubborn dirt	 <i>(Product may differ from illustration)</i>
<u>Broom</u> (Can be ordered also from us)	
Road-broom - 31 cm wide	 <i>(Product may differ from illustration)</i>
Kehrfix-broom - 25 cm wide	 <i>(Product may differ from illustration)</i>
Angle broom - 25 cm wide	 <i>(Product may differ from illustration)</i>
<u>Scoops</u> (Can be ordered also from us)	
Aluminium snow scoop - 45 cm wide	 <i>(Product may differ from illustration)</i>

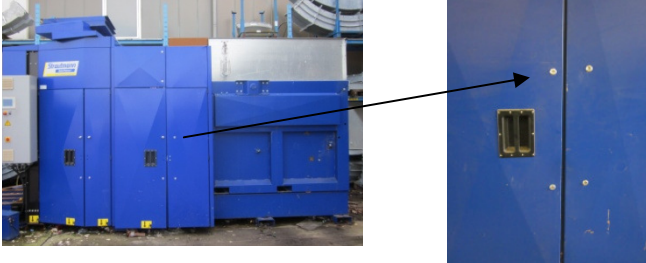
<u>Grappler</u> (Can be ordered also from us)	
Grappler - ca. 100 cm long	( <i>Product may differ from illustration</i>)
<u>Stick</u> (Can be ordered also from us)	
Aluminium-stick - 140 cm long	( <i>Product may differ from illustration</i>)
Ash-stick - 150 cm long	( <i>Product may differ from illustration</i>)
Aluminium short-stick - 35 cm long	( <i>Product may differ from illustration</i>)

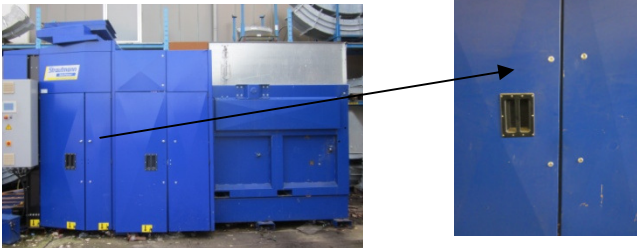
Notes:

Waste/Leavings:	
Please dispose all wastes properly and thus protect the environment.	 
Protective clothing:	
Wear for cleaning the necessary protective clothing.. This includes safety shoes, protective goggles and gloves..	  

Cleaning

1. exterior cleaning		
Cleaning intervals	wöchentlich	
step:	Anleitung:	
1.1.1	Sweep around and under the insertion. Use hoe or scraper for stubborn dirt.	   
1.2.1	Open the panel with the appropriate key.	    
1.2.2	Remove the coarse dirt with the grapppler.	

1.2.3 Now sweep the interior with the angle-broom Remove stubborn dirt with the hoe.		
1.2.4 Close and lock the panel. Make sure, that all doors are locked.		
1.3.1 Open the next panel with the appropriate key.		
1.3.2 Remove all coarse material by grapple. Remove the small residual material with the broom. Use hoe or scraper for stubborn dirt.		
1.3.3 Remove material above and on the press-plate. Take the grapper and clean the presschamber-area from all stubborn dirt. Finally sweep all party.		

1.3.4	Close and lock the panel. Make sure, that all doors are locked.	
1.3.4	Collect the coarse material under the ejection-unit by grapple.	
1.3.5	Remove the small residual material with the broom. Use hoe or scraper for stubborn dirt.	
1.3.6	Sweep the radiator at the backside. Eventual blow through.	